

# USER GUIDE FOR “ACPL FM220 RD” APPLICATION (RD Services of UIDAI)

## 1. Device Registration:

### 1.1 Install Test Applications



Install DzACPL FM220 RDdz application from Google Play store in Android phone.


Open ACPL FM220 RD application and connect device to mobile.

### 1.2 Google Play Service Not Updated:

After installing RD Service application, if Google Play Service of Android device is outdated/ invalid, then a popup prompting to update Google Play Service will be displayed (as shown in screenshot).



Press update button to reach Google play store and update Google play service to use application.

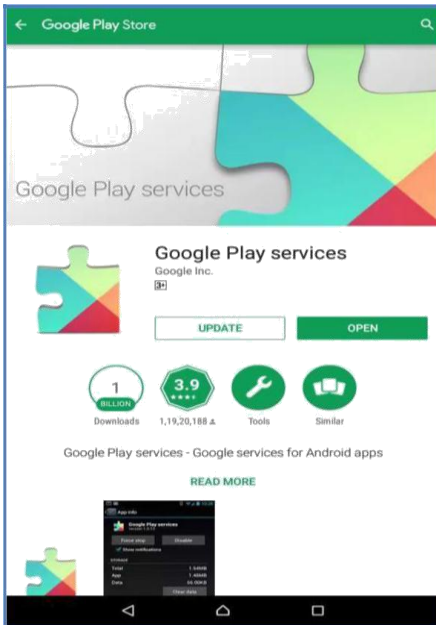



In case you don't update Google play service, the DzFM220 RD service application will not work properly.

### 1.3 Device Connection:




After connecting device to mobile it will display pop-up message to allow the application to access device. Give Permission for Device access.

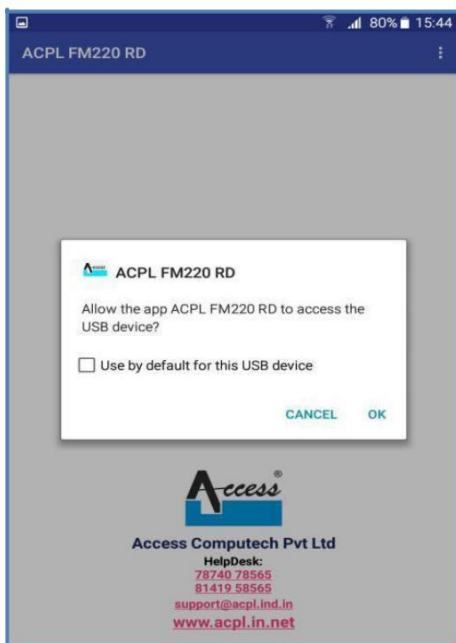

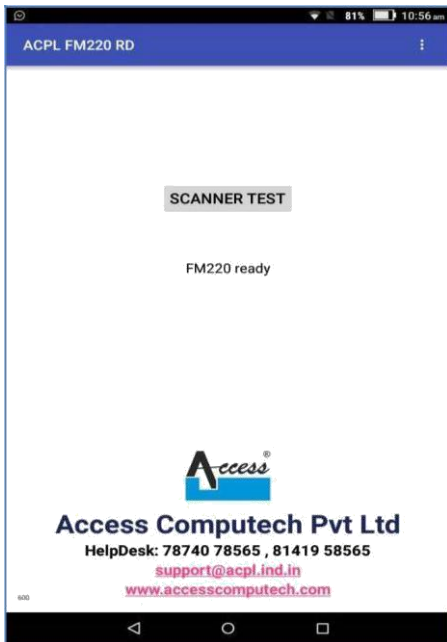

This message will be display if only your device was already registered.

#### 1.4 Network Connectivity:

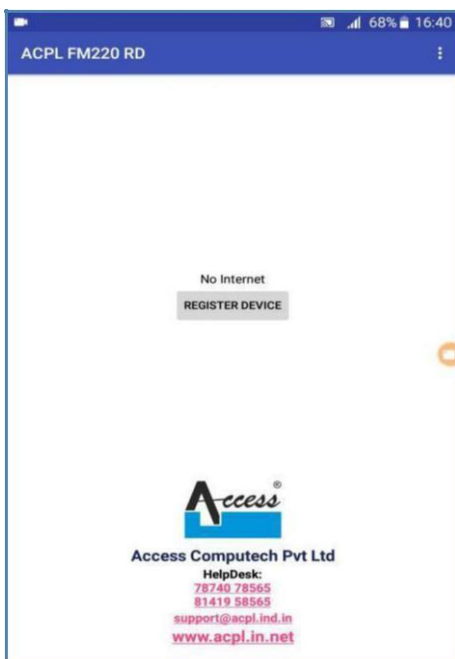


Please check Internet connectivity before checking and testing device. In case of no internet connectivity, then it will display “No Internet” message.

### 2. Testing of Registered Device:

#### 2.1 Scanner Testing:

Now start taking fingerprint by clicking on Scanner Test Button.

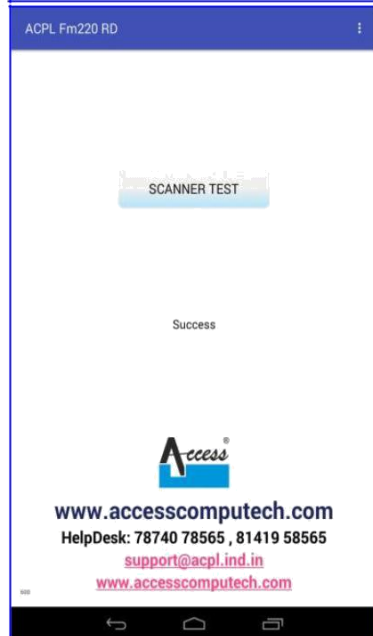

## Contact Information of Device Vendor

(Technical Support on Finger Print Device Registration)

ACCESS COMPUTECH PVT LTD.

504/6, G.I.D.C., MAKARPURA, VADODARA,  
PIN: 390010. GUJARAT, INDIA.

SUPPORT TEAM:

HELPLINE NO.: 81419 58565, 78740 78565

EMAIL: [support@acpl.ind.in](mailto:support@acpl.ind.in)